
INSTRUCTIONS FOR INSTALLATION AND MAINTENANCE



PISKO SNOW GUARD WITH SG TILE SHEET ROOF 350

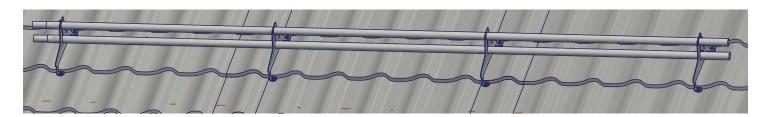

INSTALLATION

The snow guard must be positioned as close to the eaves as possible so that the load of the snow is directed towards load-bearing structures.

Place the sealants (1) to the roof bracket (2).


The roof brackets shall be installed to the under structures (battens) with HVAC-screws (4) as follows:

- Wooden batten: (min. 32 mm x 100 mm): HVAC-screw, 3 pcs / bracket (figures A and C)
- Ruukki ventilating steel batten: HVAC-screw, 3 pcs / bracket and 4 pcs / outmost brackets (figures B and D)

Slide the snow guard pipes (3) through the round holes of the roof brackets and secure the pipes in place by placing pipe fixing screws through the pipes, next to the outmost brackets (figure E).

The extensions of the snow guard pipes shall be done by sliding the pipe end with solid reducer inside the adjacent non-reduced pipe.

The edges of the snow guard pipes shall not outreach the closest roof bracket by more than 200 mm. The distance between the roof brackets shall not be more than 1000 mm.

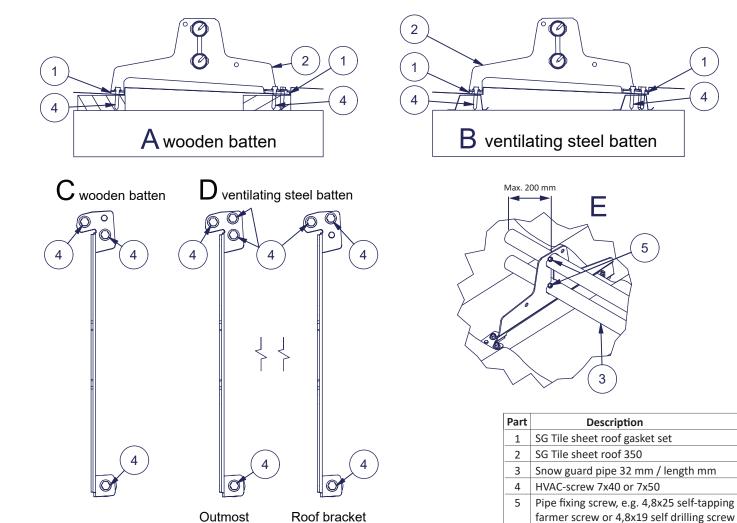


roof brackets



MAXIMUM LENGTH OF ROOF SLOPE (RT Reference Card 85-11132)

Indicative figures for the maximum distance (m) of the roof slope above the snow guard on a smooth surface. The maximum distance on coarse roofs, such as bitumen roofs can be increased by 1.3 - 1.5 times the stated amount. The snow load values shown are the actual snow loads on a roof.

Roof's inclination angle (°) and snow ratio Maximum length of slope above the snow guards (the ratio of the slope to the horizontal width of the roof pane) The characteristic value of the snow load on the roof: 1,8 kN/m² Space between the snow guard fasteners 0.5 m 0.6 m 0.75 m 0.9 m 1,0 m 1.2 m Roof's inclination angle and snow ratio < 15°, (1:3,7) 21.4 17.9 14.3 12.0 10,7 9.0 15... 22°, 1:3,7... 1:2,5 11,4 9.5 7,6 6,3 5,7 4.8 22... 27°, 1:2,5... 1:2 8.4 7.0 5,6 4.7 4,2 3.5 27... 37°, 1:2... 1:1,3 7.4 6.2 4.9 4.1 3.7 3,1 37... 45°, 1:1,3... 1:1 9.0 7.5 5.9 5.0 4.5 3,7 The characteristic value of the snow load on the roof: 2,0 kN/m² Space between the snow guard fasteners 0,5 m 0,6 m 0,75 m 0,9 m 1,0 m 1,2 m Roof's inclination angle and snow ratio < 15°, (1:3,7) 19,1 16,1 12,9 10,8 9,6 8,1 15... 22°. 1:3.7... 1:2.5 10.2 6.9 5.1 4.3 8.6 5.7 22... 27°, 1:2,5... 1:2 7,6 6,3 5,1 4.2 3,8 3,2 27... 37°, 1:2... 1:1,3 6,7 5.6 4,4 3,7 3.3 2.8 37... 45°, 1:1,3... 1:1 4.5 8.2 6.8 5.3 4.1 3.3 The characteristic value of the snow load on the roof: 2,6 kN/m² Space between the snow guard fasteners 0,5 m 0,6 m 0,75 m 0,9 m 1,0 m 1,2 m Roof's inclination angle and snow ratio < 15°. (1:3.7) 15.0 12.5 9.9 8.3 7.5 6.2 15... 22°, 1:3,7... 1:2,5 8,0 5,3 4,4 4,0 6,6 3,3

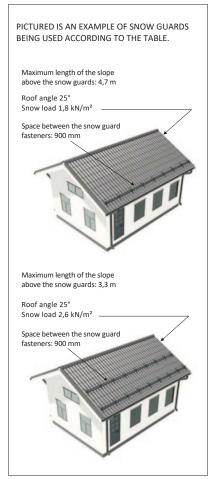

Pisko Snow Guards are capable of bearing a load of at least 5 kN/m, in the direction of the inclined roof. By following the values in the table these requirements are fulfilled.

4,8

4.3

5.2

3,9

3.4

4.1

3,3

2.8

3,5

5,8

5.2

6,2



MAINTENANCE

2,9

2.6

3.1

2,4

2.1

2,6

Pisko products are hard-wearing and safe to use, guaranteed by the ongoing quality control and development work by Piristeel Ltd, as well as correct installation of the products according to the manufacturer's instructions. To ensure the reliability and safety of the products, the property owner must carry out yearly inspection and maintenance procedures, and monitor that the snow load specified by the regulations is not exceeded.

- Check the tightness of joints, connections and attachments.
- Ensure any excessive snow load is cleared to minimize the strain
 on structures and attachment points (as necessary; there might
 be a need several times during the winter). Product durability in
 accordance with the certification certificate.
- Check the paintwork and zinc coating of the products; repair faults and touch up paintwork if necessary
- Replace or repair any damaged or faulty parts as soon as possible.



22... 27°, 1:2,5... 1:2

27... 37°, 1:2... 1:1,3

37... 45°, 1:1,3... 1:1